


## Instruction of Watch Movement

# 3 hands

### ◆ Display

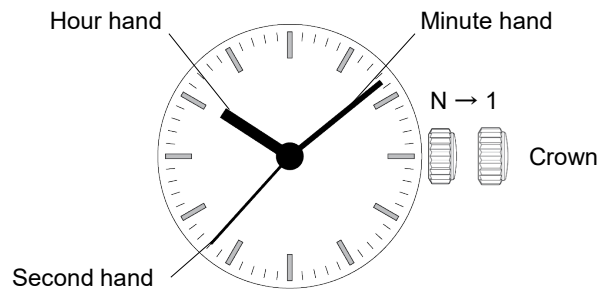

### ◆ Crown operation

		Crown position	
		N : normal	1 : 1st click
Crown		Free	Time setting

### ◆ How to set time

- (1) Pull the crown out to the 1st click position when the second hand is at the 12 o'clock position.
- (2) Turn the crown to set the hour and minute hands.
  - When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.
- (3) Push the crown back to the normal position.

### ◆ Power depletion warning function

When the battery nears its end, the second hand moves at two-second intervals instead of the normal one-second intervals. In that case, have the battery replaced with a new one as soon as possible.

- The watch remains accurate while the second hand is moving at two-second intervals.

Note : The availability of this function is different depending on the caliber.