


Watch Movement Parts List and Disassemble Guide

Cal.VR43B

SOLAR SERIES

- Data / 24hour
- 1/1 sec. chronograph

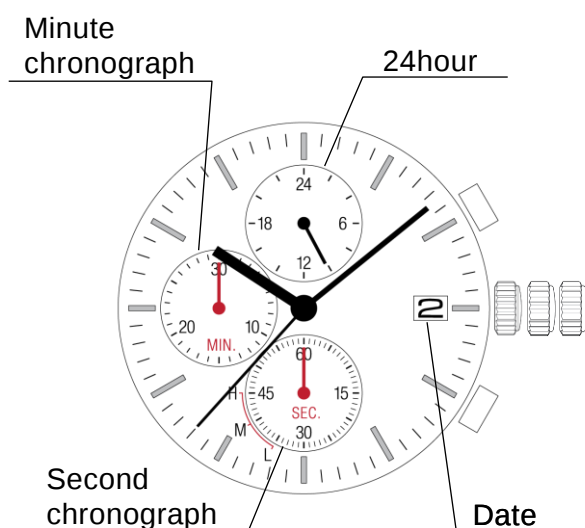

MOVEMENT SPECIFICATIONS

Movement Size 13 1/2'''

Height 4.52mm


Casing Diameter Ø 30.6mm

Running Time Approx. 5 months


Cal.VR43B Parts List 零件一覽表

No.	PARTS NAME	CHINESE(簡体字)	QTY	VR43B1	VR43B2
(1)	Solar cell unit	太阳能电池组件	1	4020 527	←
(2)	Solar cell lead terminal	太阳能电池引极片	2	4281 516	←
(3)	Screw	螺丝	3	0022 247	←
(4)	Date indicator maintaining plate	日历盘夹板	1	0808 528	←
(5)	Date jumper	日历簧	1	0810 507	←
(6)	Date indicator	日历盘	1	0878 ***	←
(7)	Date indicator guide plate	日历盘导向板	1	0712 509	←
(8)	Date indicator driving wheel	日历推动轮	1	0802 520	←
(9)	Intermediate date wheel	日历推动中间轮	1	0817 553	←
(10)	24 hour wheel	24小时轮	1	1002 562	←
(11)	Minute counting wheel	分CG轮	1	0888 521	←
(12)	24 hour intermediate wheel	24小时中间轮	1	0817 554	←
(13)	4th minute counting intermediate wheel	分CG第四中间轮	1	0885 513	←
(14)	Date corrector wheel	日历修正轮	1	0806 500	←
(15)	5th date corrector transmission wheel	第五日历修正传动轮	1	0962 900	←
(16)	Hour wheel	时轮	1	0271 662	←
(17)	2nd date corrector transmission wheel	第二日历修正传动轮	1	0962 891	←
(18)	3rd date corrector transmission wheel	第三日历修正传动轮	1	0962 891	←
(19)	4th date corrector transmission wheel	第四日历修正传动轮	1	0962 891	←
(20)	Lithium metal batteries	充电电池组件	1	3023 34R	←
(21)	Screw	螺丝	3	0022 247	←
(22)	Circuit cover	电路板盖	1	4461 646	4461 647
(23)	Coil conduction basal plate	线圈导通基板	1	4224 519	←
(24)	Connection (-) insulating plate	负极绝缘片	1	4216 567	←
(25)	Circuit block	电路板	1	4000 966	←
(26)	Battery connection (-)	负极片	1	4270 523	←
(27)	Train wheel bridge	轮列夹板	1	0125 543	←
(28)	Fourth wheel & pinion	四号轮	1	0241 605	←
(29)	Seconds counting wheel	秒CG轮	1	0888 511	←
(30)	1st minute counting intermediate wheel	分CG第一中间轮	1	0885 510	←
(31)	2nd minute counting intermediate wheel	分CG第二中间轮	1	0885 511	←
(32)	Third wheel & pinion	三号轮	1	0231 904	←
(33)	3rd minute counting intermediate wheel	分CG第三中间轮	1	0885 512	←
(34)	Seconds counting intermediate wheel	秒CG中间轮	1	0701 904	←
(35)	Fifth wheel & pinion	五号轮	1	0701 904	←
(36)	Minute wheel	度数轮	1	0261 904	←
(37)	Counting rotor	CG转子	1	4146 524	←
(38)	Rotor	转子	1	4146 524	←
(39)	Train wheel setting lever	轮组止动竿	1	0391 504	←
(40)	Screw	螺丝	2	0022 247	←
(41)	Coil block(B)	线圈B	1	4002 556	←
(42)	Coil block(A)	线圈A	1	4002 923	←
(43)	Stator(B)	定子B	1	4239 570	←
(44)	Stator(A)	定子A	1	4239 571	←
(45)	Setting wheel	拨针轮	1	0281 904	←
(46)	Setting lever	鸡头	1	0383 891	←
(47)	Yoke	横担	1	0384 890	←
(48)	Setting stem (standard)	把芯 (标准)	1	0351 578	←
	Setting stem (short)	把芯 (短的)	1	0351 177	←
(49)	Clutch wheel	猪笼轮	1	0282 890	←
(50)	1st date corrector transmission wheel	第一日历修正传动轮	1	0962 890	←
(51)	Center wheel & pinion	中心轮	1	0221 663	←

Cal.VR42B,VR43B DISASSEMBLE CHART(1)

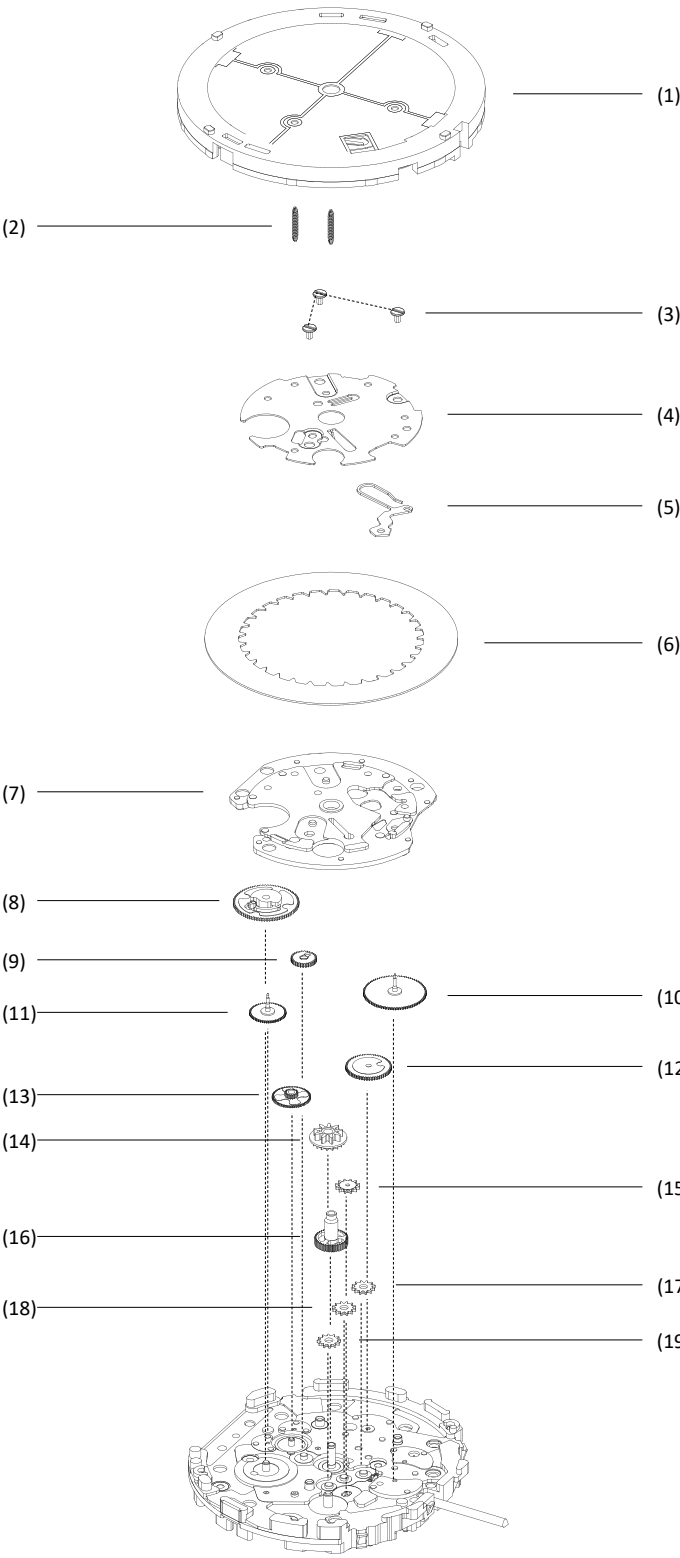

Cal.VR42B,VR43B DISASSEMBLE CHART(2)

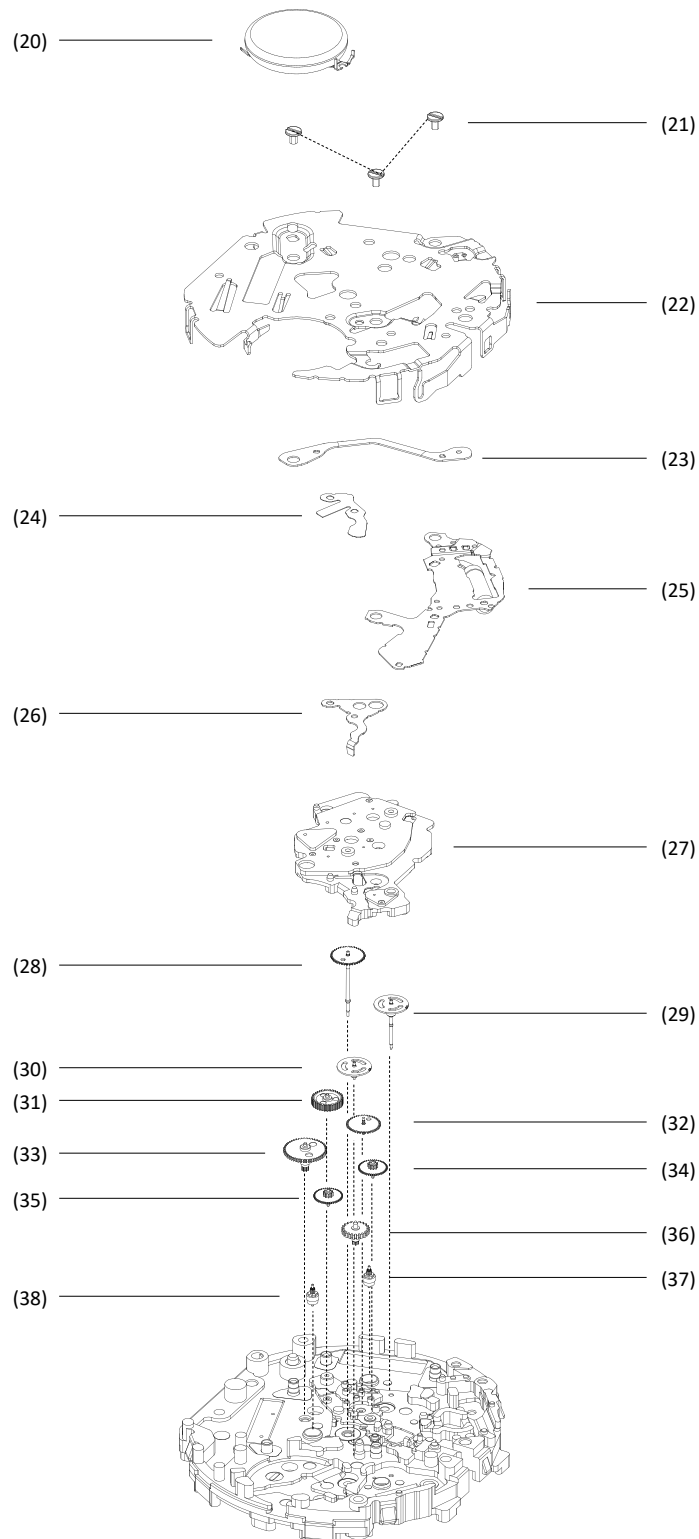

Cal.VR42B,VR43B DISASSEMBLE CHART(3)

