


## Watch Movement Parts List and Disassemble Guide

# Cal.VS76A

**SOLAR SERIES**

- 1/20 sec. chronograph

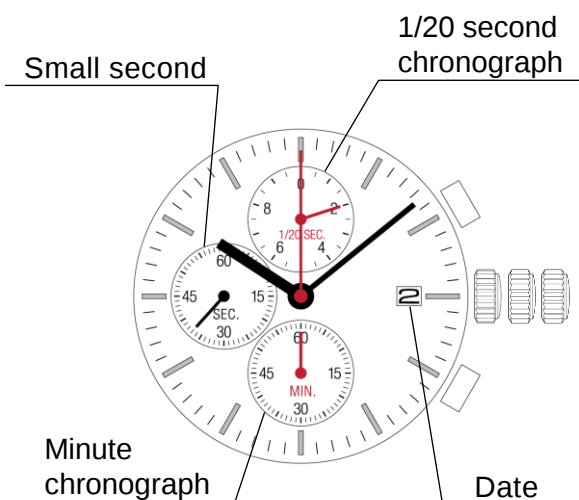

## MOVEMENT SPECIFICATIONS

**Movement Size**

12'''

**Height**

4.40mm

**Casing Diameter**

Ø 27.0mm


**Running Time**

Approx. 6 months


## Cal.VS76A Parts List 零件一覽表

| No.  | PARTS NAME                                                 | CHINESE(簡体字) | QTY | VS76A1   |
|------|------------------------------------------------------------|--------------|-----|----------|
| (1)  | Untransparent plate                                        | 阻透光板         | 1   | 4453 500 |
| (2)  | Solar cell unit                                            | 太阳能电池组件      | 1   | 4020 551 |
| (3)  | Solar cell lead terminal                                   | 太阳能电池引极片     | 2   | 4281 516 |
| (4)  | Screw                                                      | 螺丝           | 2   | 0012 354 |
| (5)  | Date indicator maintaining plate                           | 日历盘夹板        | 1   | 0808 523 |
| (6)  | Date indicator                                             | 日历盘          | 1   | 0878 *** |
| (7)  | Date indicator driving wheel                               | 日历推动轮        | 1   | 0802 580 |
| (8)  | Screw                                                      | 螺丝           | 1   | 0012 354 |
| (9)  | Date indicator guide plate                                 | 日历盘导向板       | 1   | 0712 507 |
| (10) | Calendar corrector setting wheel                           | 日历修正轮        | 1   | 0737 505 |
| (11) | Hour wheel                                                 | 时轮           | 1   | 0271 636 |
| (12) | Date corrector setting transmission wheel plate fixing pin | 日历修正传动轮夹板固定柱 | 1   | 0027 973 |
| (13) | Date corrector setting transmission wheel plate            | 日历修正传动轮夹板    | 1   | 4288 500 |
| (14) | 3rd calendar corrector setting transmission wheel          | 第三日历修正传动轮    | 1   | 0962 504 |
| (15) | 2nd calendar corrector setting transmission wheel          | 第二日历修正传动轮    | 1   | 0962 504 |
| (16) | 1st calendar corrector setting transmission wheel          | 第一日历修正传动轮    | 1   | 0962 580 |
| (17) | Lithium metal batteries                                    | 充电电池组件       | 1   | 3023 34T |
| (18) | Screw                                                      | 螺丝           | 3   | 0022 230 |
| (19) | Secondary battery clamp                                    | 充电电池压片       | 1   | 4225 618 |
| (20) | Screw                                                      | 螺丝           | 3   | 0022 459 |
| (21) | Seconds wheel friction spring                              | 秒齿芯掩片        | 1   | 0396 580 |
| (22) | Conduction basal plate                                     | 导通基板         | 1   | 4224 518 |
| (23) | Circuit cover                                              | 电路板盖         | 1   | 4461 599 |
| (24) | Circuit block                                              | 电路板          | 1   | 4000 779 |
| (25) | Train wheel bridge fixing pin                              | 轮列夹板固定柱      | 1   | 0027 974 |
| (26) | Train wheel bridge                                         | 轮列夹板         | 1   | 0125 527 |
| (27) | Seconds counting wheel                                     | 秒CG轮         | 1   | 0888 501 |
| (28) | 1st seconds counting intermediate wheel                    | 秒CG第一中间轮     | 1   | 0885 594 |
| (29) | 2nd seconds counting intermediate wheel                    | 秒CG第二中间轮     | 1   | 0885 595 |
| (30) | Seconds counting rotor                                     | 秒CG转子        | 1   | 4146 710 |
| (31) | Fourth wheel & pinion                                      | 四号轮          | 1   | 0241 583 |
| (32) | Rotor                                                      | 转子           | 1   | 4146 710 |
| (33) | Small second wheel                                         | 小秒轮          | 1   | 0240 511 |
| (34) | Fifth wheel & pinion                                       | 五号轮          | 1   | 0701 581 |
| (35) | Third wheel & pinion                                       | 三号轮          | 1   | 0231 580 |
| (36) | Center wheel spring                                        | 中心轮压片        | 1   | 4283 581 |
| (37) | Minute wheel                                               | 度数轮          | 1   | 0261 580 |
| (38) | Centre wheel & pinion                                      | 中心轮          | 1   | 0221 604 |
| (39) | 1/20 seconds counting intermediate wheel                   | 1/20秒CG中间轮   | 1   | 0950 590 |
| (40) | 1/20 seconds counting wheel                                | 1/20秒CG轮     | 1   | 0902 500 |
| (41) | 1/20 seconds counting rotor                                | 1/20秒CG转子    | 1   | 4146 710 |
| (42) | Minute counting intermediate wheel                         | 分CG中间轮       | 1   | 0950 590 |
| (43) | Minute counting rotor                                      | 分CG转子        | 1   | 4146 710 |
| (44) | Minute counting wheel                                      | 分CG轮         | 1   | 0902 500 |
| (45) | Coil block                                                 | 线圈           | 1   | 4002 541 |
| (46) | Minute counting coil block                                 | 分CG线圈        | 1   | 4002 542 |
| (47) | Seconds counting coil block                                | 秒CG线圈        | 1   | 4002 541 |
| (48) | 1/20 seconds counting coil block                           | 1/20秒CG线圈    | 1   | 4002 542 |
| (49) | Stator                                                     | 定子           | 1   | 4239 710 |
| (50) | Minute counting stator                                     | 分CG定子        | 1   | 4239 712 |
| (51) | Seconds counting stator                                    | 秒CG定子        | 1   | 4239 717 |
| (52) | 1/20 seconds counting stator                               | 1/20秒CG定子    | 1   | 4239 713 |
| (53) | Train wheel setting lever                                  | 轮组止动竿        | 1   | 0391 591 |
| (54) | Switch lever (B)                                           | 按掣竿(B)       | 1   | 4450 701 |
| (55) | Switch lever (A)                                           | 按掣竿(A)       | 1   | 4450 703 |
| (56) | Yoke                                                       | 横担           | 1   | 0384 583 |
| (57) | Setting lever                                              | 鸡头           | 1   | 0383 592 |
| (58) | Setting wheel                                              | 拨针轮          | 1   | 0281 580 |
| (59) | Setting stem                                               | 把芯           | 1   | 0351 587 |
| (60) | Clutch wheel                                               | 猪笼轮          | 1   | 0282 585 |

## Cal.VS76A DISASSEMBLE CHART

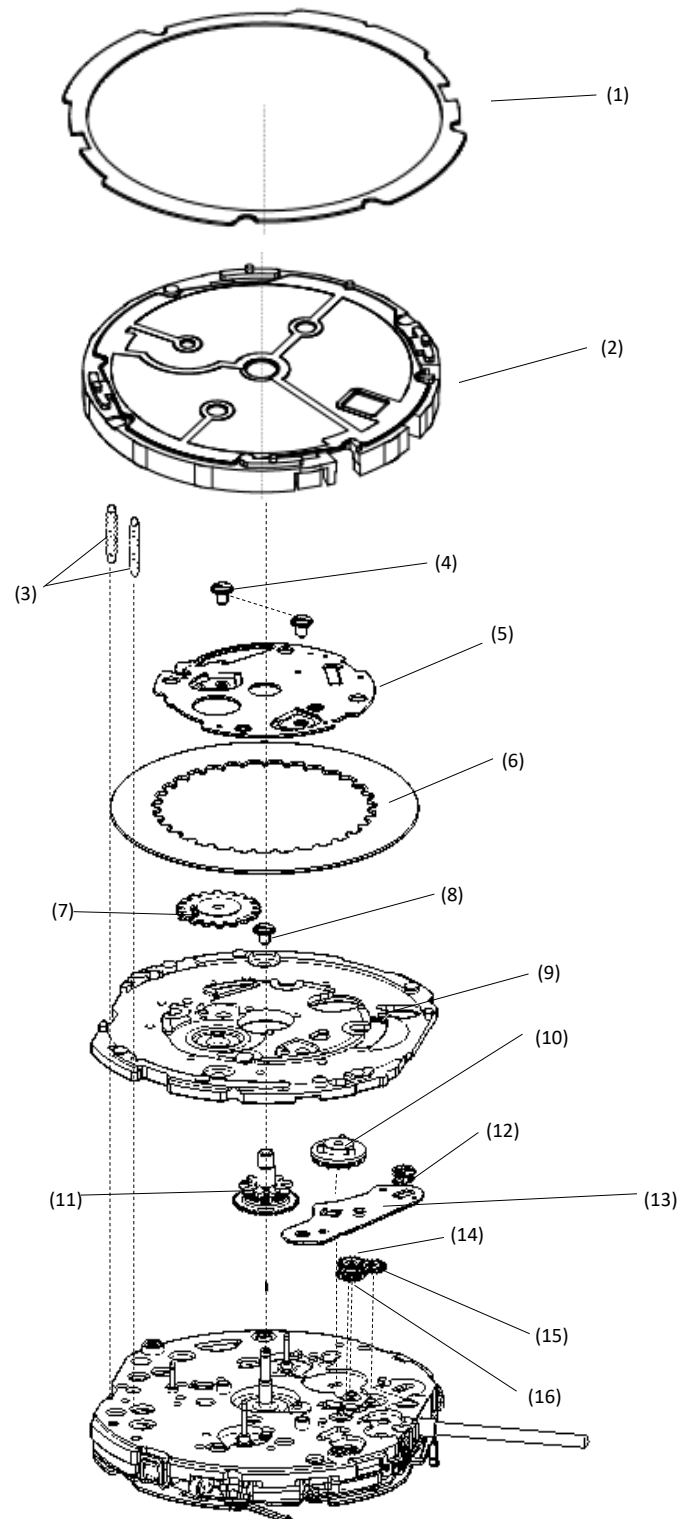

## Cal.VS76A DISASSEMBLE CHART

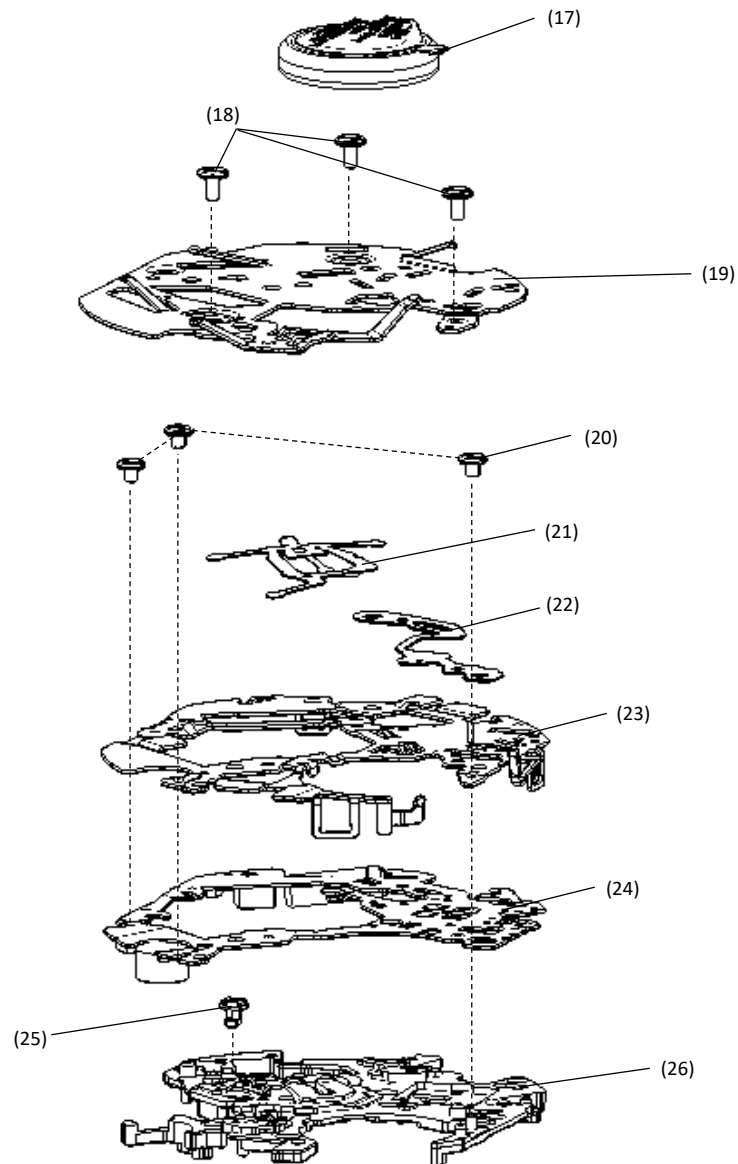

## Cal.VS76A DISASSEMBLE CHART

