


Watch Movement Parts List and Disassemble Guide

Cal.YM62A

CHRONOGRAPH

- 1/5 sec. chronograph
- Alarm

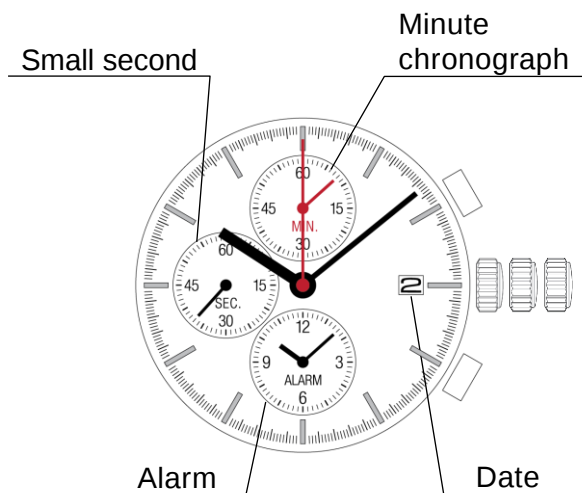

MOVEMENT SPECIFICATIONS

Movement Size 12'''

Height 3.7mm


Casing Diameter Ø 27.0mm

Battery Life 3 years



Cal.YM62A Parts List 零件一覽表

No.	PARTS NAME	CHINESE (簡體語)	Qty	YM62A1
(1)	Date indicator maintaining plate fixing pin	日曆盤固定片柱位	2	0027 973
(2)	Date indicator maintaining plate	日曆盤固定片	1	0808 580
(3)	Date indicator	日曆盤	1	0878 ***
(4)	Calendar corrector setting transmission wheel	日曆過輪	1	0962 580
(5)	Calendar corrector setting wheel	日期撥撥輪	1	0737 580
(6)	Date indicator driving wheel	日曆推動輪	1	0802 580
(7)	Alarm hour wheel	響鬧時輪	1	0271 583
(8)	Hour wheel	時輪	1	0271 588
(9)	Screw	螺絲	2	0022 230
(10)	Battery clamp	電池夾	1	4225 513
(11)	Battery	電池	1	3013 250
(12)	Screw	螺絲	4	0022 459
(13)	Circuit cover	電路板蓋	1	4457 814
(14)	Seconds wheel friction spring	計秒阻力簧	1	0396 580
(15)	Circuit block	電路板	1	4000 517
(16)	Buzzer lead terminal	響鬧片引極	1	4246 527
(17)	Battery connection(-)	負極片	1	4270 710
(18)	Train wheel bridge fixing pin	夾板拖柱仔	1	0027 974
(19)	Train wheel bridge	夾板	1	0125 577
(20)	1/5 seconds counting wheel	秒計時輪	1	0888 582
(21)	Small second wheel	細秒針輪	1	0240 580
(22)	Fourth wheel & pinion	4號輪	1	0241 583
(23)	Third wheel & pinion	3號輪	1	0231 580
(24)	1st 1/5 seconds counter intermediate wheel	1/5秒計一號過輪	1	0885 590
(25)	Fifth wheel & pinion	5號輪	1	0701 581
(26)	2nd 1/5 seconds counter intermediate wheel	1/5秒計二號過輪	1	0885 591
(27)	Minute wheel	度數輪/分輪	1	0261 580
(28)	Minute counter intermediate wheel	小秒中間輪	1	0950 590
(29)	Minute counting wheel	秒分計時輪	1	0902 580
(30)	Alarm intermediate wheel	響鬧中間車	1	0950 590
(31)	Alarm center wheel	響鬧中心輪	1	0270 582
(32)	Alarm minute wheel	響鬧分輪	1	0261 582
(33)	Alarm coil block(B)	響鬧/計時線圈 (B)	1	4002 542
(34)	Coil block(A)	秒計線圈 (A)	1	4002 700
(35)	1/5 seconds coil block(A)	秒計線圈 (A)	1	4002 700
(36)	Minute counting coil block(B)	響鬧/計時線圈 (B)	1	4002 542
(37)	Alarm rotor	轉子	1	4146 710
(38)	Rotor	轉子	1	4146 710
(39)	1/5 seconds rotor	轉子	1	4146 710
(40)	Minute counting rotor	轉子	1	4146 710
(41)	Switch lever(A)	按掣竿(A)	1	4450 703
(42)	Setting lever	押掣竿	1	0383 592
(43)	Yoke	換日竿/橫擔	1	0384 583
(44)	Setting wheel	小鐵車/撥針輪	1	0281 580
(45)	Clutch wheel	豬籠輪/離合輪	1	0282 585
(46)	Setting stem (Standard)	柄軸/巴心	1	0351 584
(47)	Center wheel spring	中心輪固定片	1	4283 581
(48)	Center wheel & pinion	中心輪	1	0221 583
(49)	Train wheel setting lever	輪組止動竿	1	0391 591
(50)	Stator	轉子甲板/定子	1	4239 710
(51)	1/5 seconds stator	秒計定子 (秒)	1	4239 717
(52)	Alarm stator	響鬧定子	1	4239 712
(53)	Minute counting stator	秒計定子 (A)	1	4239 713
(54)	Switch lever(B)	按掣竿(B)	1	4450 701

YM62A Disassemble Chart (1)

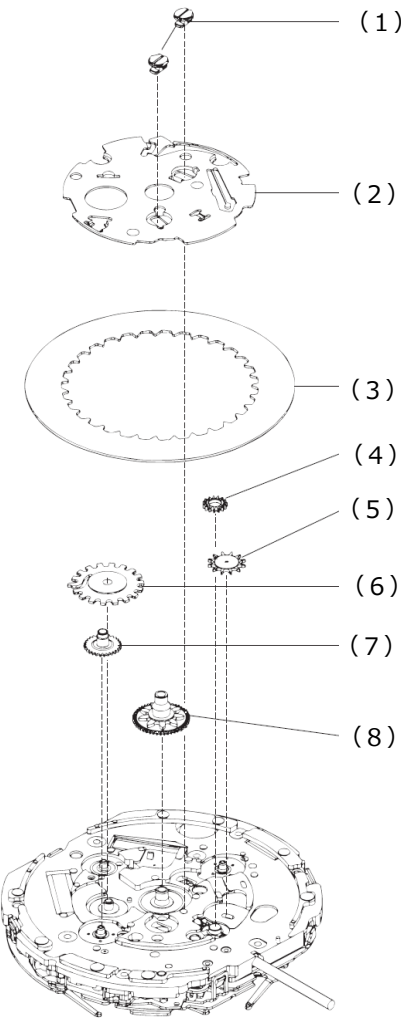

YM62A Disassemble Chart (2)

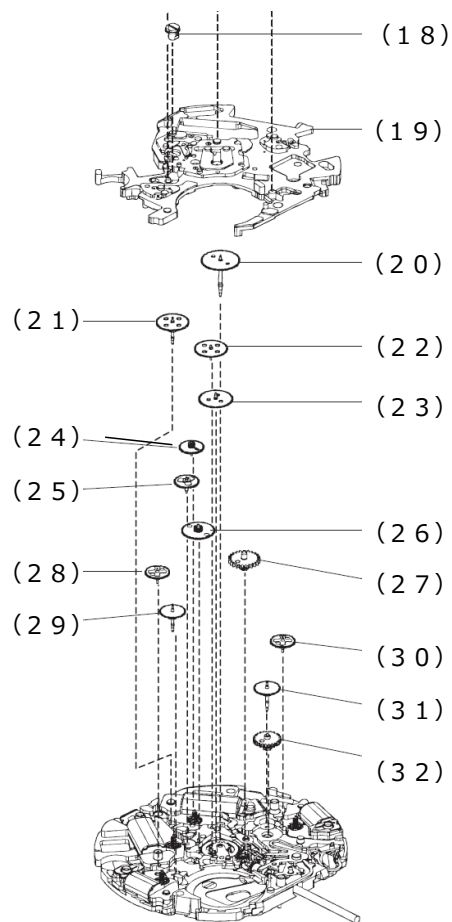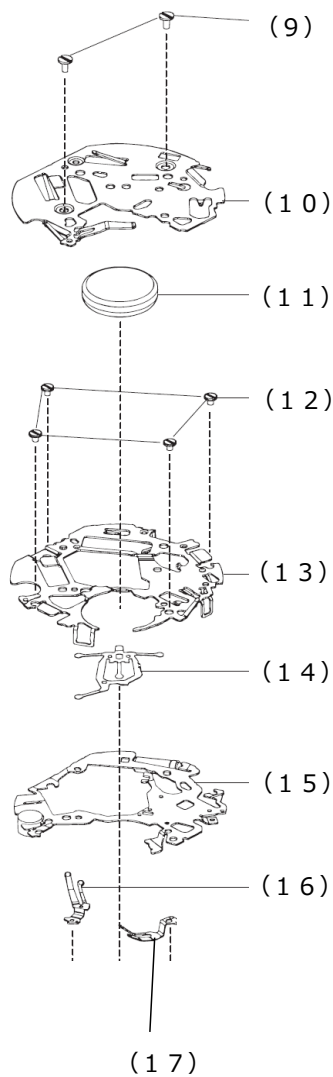

YM62A Disassemble Chart (3)

