


Watch Movement Parts List and Disassemble Guide

Cal.YM64A

CHRONOGRAPH

- 1/5 sec. chronograph
- Alarm

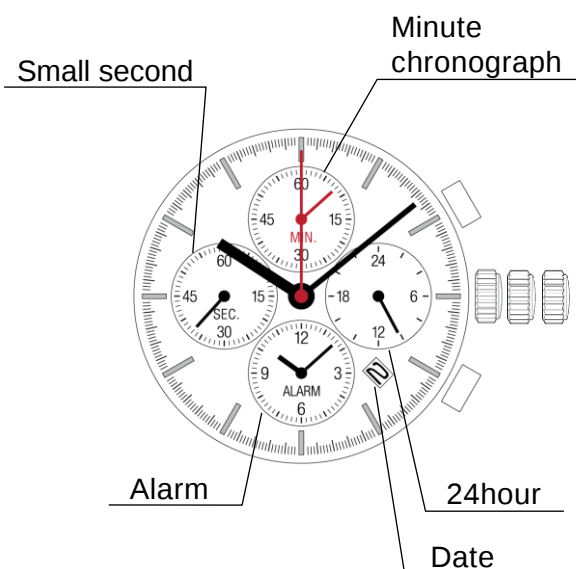

MOVEMENT SPECIFICATIONS

Movement Size 12'''

Height 4.34mm


Casing Diameter Ø 27.0mm

Battery Life 3 years


Cal.YM64A Parts List 零件一覽表

No.	PARTS NAME	CHINESE(简体字)	QTY	YM64A1
(1)	Screw	螺丝	2	0012 354
(2)	Date indicator maintaining plate	日历盘夹板	1	0808 523
(3)	Alarm hour wheel	闹铃时轮	1	0271 640
(4)	Date indicator	日历盘	1	0878 ***
(5)	Date indicator driving wheel	日历推动轮	1	0802 580
(6)	Screw	螺丝	1	0012 354
(7)	Date indicator guide plate	日历盘导向板	1	0712 507
(8)	Calendar corrector setting wheel	日历修正轮	1	0737 505
(9)	24 hours wheel	24小时轮	1	1002 535
(10)	24hour intermediate wheel	24小时中间轮	1	0817 536
(11)	24hour wheel guide plate fixing pin	24小时轮导向板固定柱	1	0027 973
(12)	24hour wheel guide plate	24小时轮导向板	1	4288 500
(13)	3rd calendar corrector setting transmission wheel	第三日历修正传动轮	1	0962 504
(14)	2nd calendar corrector setting transmission wheel	第二日历修正传动轮	1	0962 504
(15)	1st calendar corrector setting transmission wheel	第一日历修正传动轮	1	0962 580
(16)	Hour wheel	时轮	1	0271 637
(17)	Battery	电池	1	3013 250
(18)	Screw(A)	螺丝	2	0022 230
(19)	Battery clamp	电池压片	1	4225 585
(20)	Screw(B)	螺丝	4	0022 459
(21)	Circuit cover	电路板盖	1	4457 814
(22)	Seconds wheel friction spring	秒齿芯掩片	1	0396 580
(23)	Circuit block	电路板	1	4000 517
(24)	Battery connection(-)	负极片	1	4270 710
(25)	Buzzer lead terminal	蜂鸣器引极片	1	4246 527
(26)	Train wheel bridge fixing pin	轮列夹板固定柱	1	0027 974
(27)	Train wheel bridge	轮列夹板	1	0125 577
(28)	1/5 seconds counting wheel	1/5秒CG轮	1	0888 502
(29)	Alarm intermediate wheel	闹铃中间轮	1	0950 590
(30)	Alarm center wheel	闹铃中心轮	1	0902 503
(31)	1st 1/5 seconds counting intermediate wheel	1/5秒CG第一中间轮	1	0885 590
(32)	Alarm minute wheel	闹铃度数轮	1	0261 582
(33)	2nd 1/5 seconds counting intermediate wheel	1/5秒CG第二中间轮	1	0885 591
(34)	Fourth wheel & pinion	四号轮	1	0241 583
(35)	Small second wheel	小秒轮	1	0240 512
(36)	Fifth wheel & pinion	五号轮	1	0701 581
(37)	Third wheel & pinion	三号轮	1	0231 580
(38)	Minute counting intermediate wheel	分CG中间轮	1	0950 590
(39)	Minute counting wheel	分CG轮	1	0902 501
(40)	Yoke	横担	1	0384 583
(41)	Setting lever	鸡头	1	0383 592
(42)	Switch lever(B)	按掣竿 (B)	1	4450 701
(43)	Switch lever(A)	按掣竿 (A)	1	4450 703
(44)	Setting wheel	拨针轮	1	0281 580
(45)	Clutch wheel	猪笼轮	1	0282 585
(46)	Minute wheel	度数轮	1	0261 580
(47)	Train wheel setting lever	轮组止动竿	1	0391 591
(48)	Setting stem (standard)	把芯 (标准)	1	0351 584
(49)	Coil block(A)	线圈(A)	1	4002 700
(50)	1/5 seconds counting coil block(A)	1/5秒CG线圈(A)	1	4002 700
(51)	Alarm coil block(B)	闹铃线圈(B)	1	4002 542
(52)	Minute counting coil block(B)	分CG线圈(B)	1	4002 542
(53)	Rotor	转子	1	4146 710
(54)	1/5 seconds counting rotor	1/5秒CG转子	1	4146 710
(55)	Alarm rotor	闹铃转子	1	4146 710
(56)	Minute counting rotor	分CG转子	1	4146 710
(57)	Stator	定子	1	4239 710
(58)	1/5 seconds counting stator	1/5秒CG定子	1	4239 717
(59)	Alarm stator	闹铃定子	1	4239 712
(60)	Minute counting stator	分CG定子(D)	1	4239 713
(61)	Center wheel spring	中心轮压片	1	4283 581
(62)	Center wheel & pinion	中心轮	1	0221 605


YM64 DISASSEMBLE CHART (1)

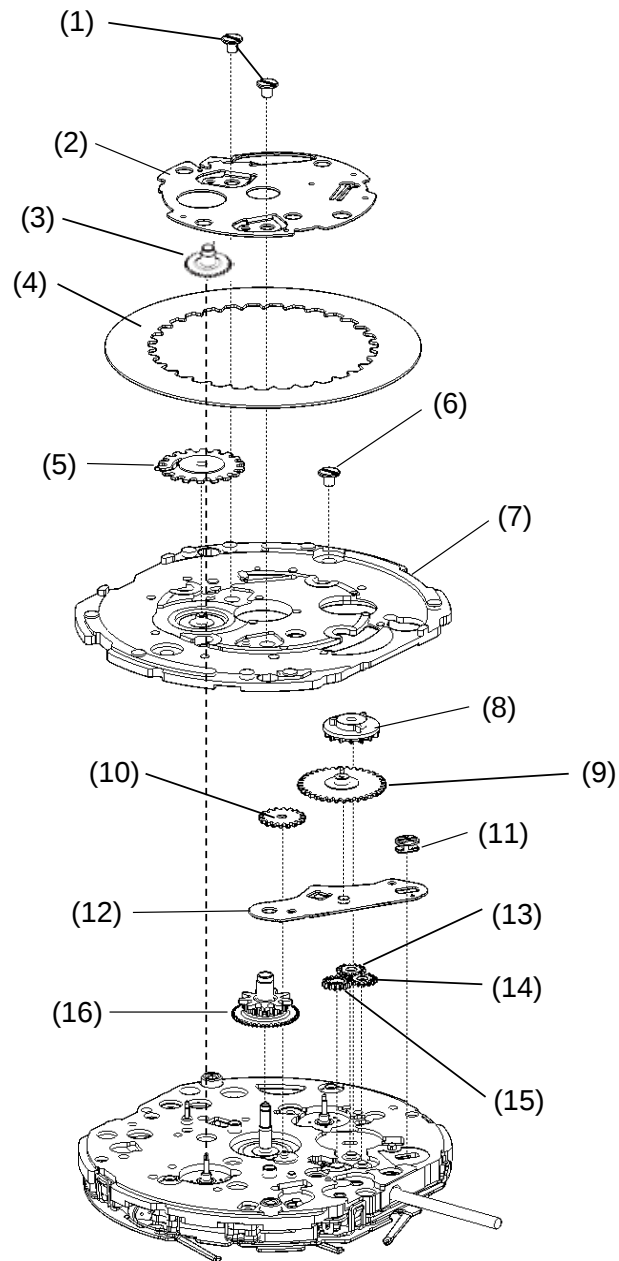

YM64 DISASSEMBLE CHART (2)

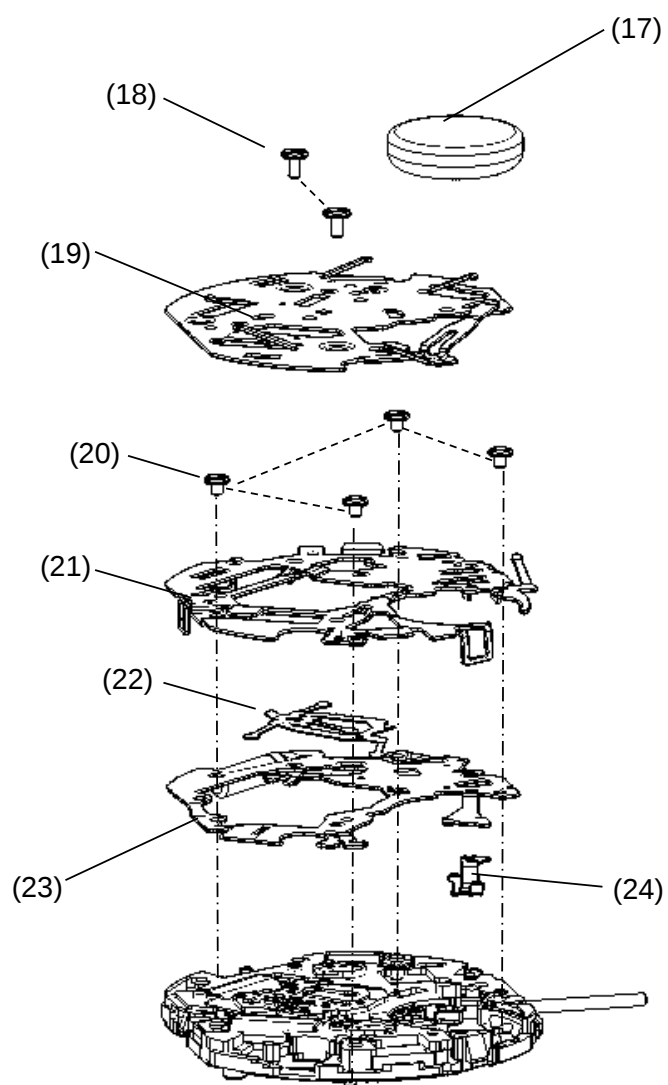

YM64 DISASSEMBLE CHART (3)

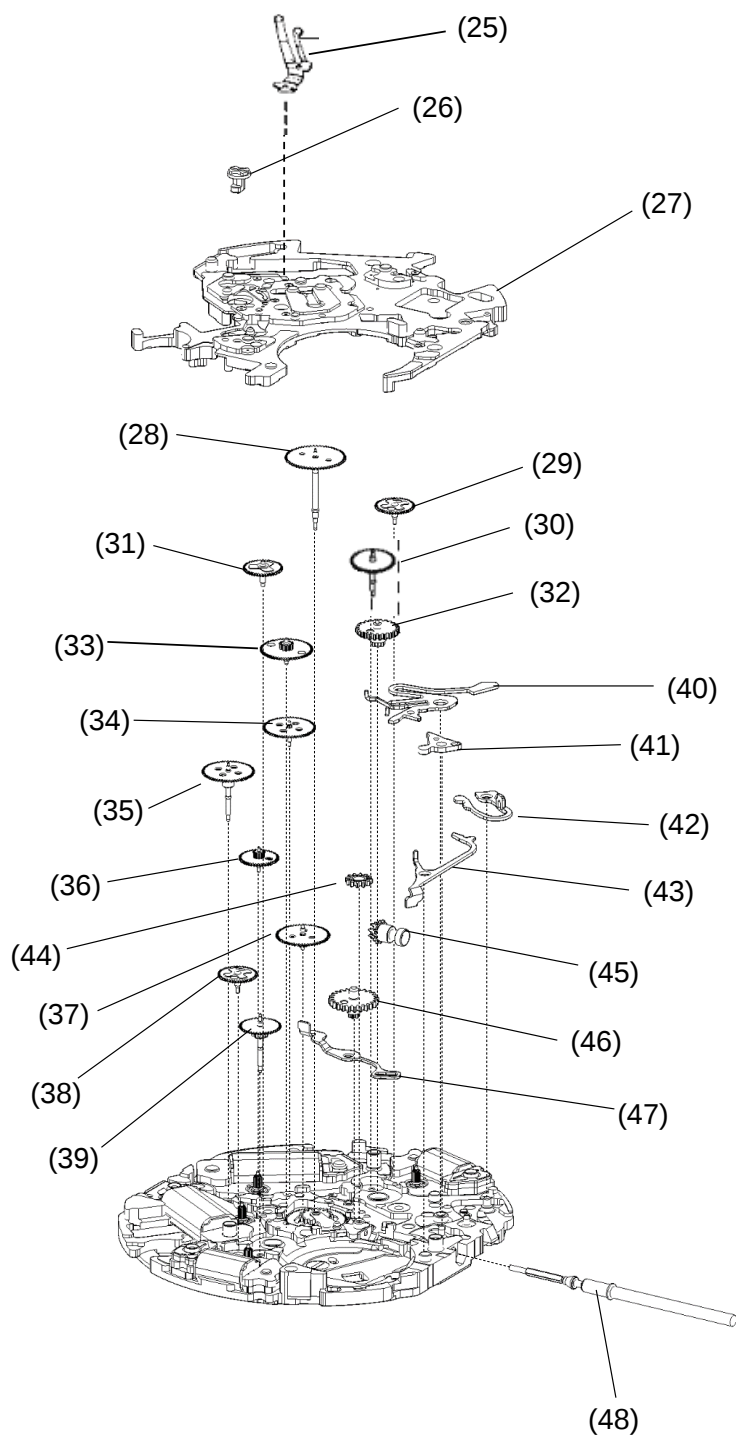

YM64 DISASSEMBLE CHART (4)

